



BS91601A CL40/24  
BS91602A CL40/24  
Installation Instruction



Voltage : AC~220V~240V  
Frequency : 50Hz  
Source : Fortimo SLM / Cree CXA


### Installation

The installation and maintenance of this product must be by a professional. Please read this instruction sheet carefully before installation.




Do not operate with power supply connected.

#### 1. Make the cut-out on the ceiling.

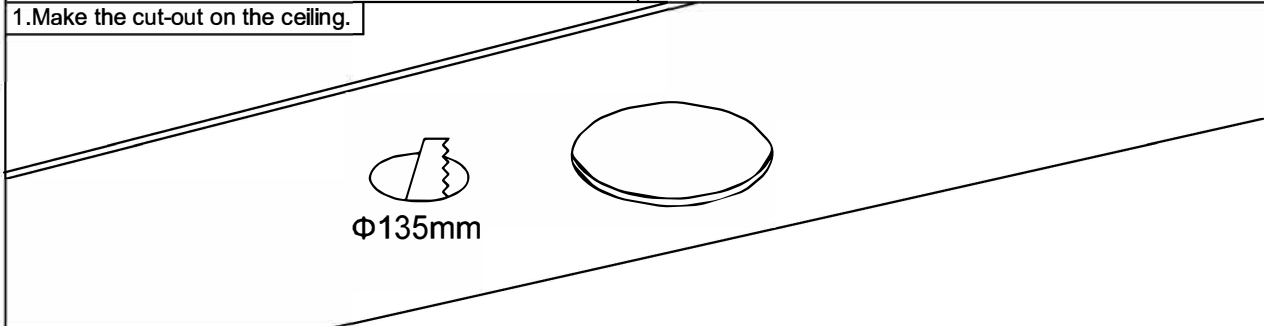

#### 2. Install the lighting.

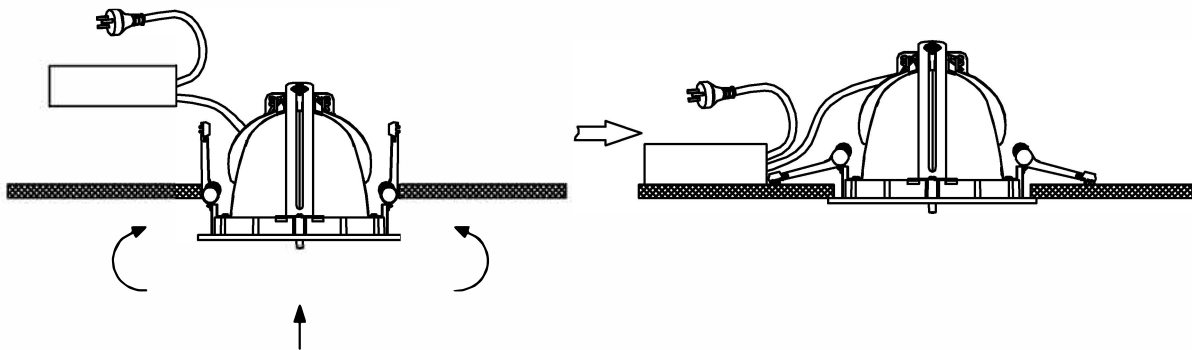

Put the lighting into the hole on the ceiling, then use the clips to fix the lighting.

- Make sure the power supply is switched off before maintenance .
- Please respect all fireproofing legislation.
- This product should not be covered with combustible material.
- Remote driver required.



#### ● Maintenance

Make sure the power supply switch is off before maintenance and changing the light source. The light source must be cool off completely before changing to prevent scald and electric shock. Do not violate any fireproofing legislation. This lighting can not be covered by the combustible. Please consult the qualified engineer if you have any question on this instruction sheet.