

PICCOLO LOOK OUT

CEILING / SURFACE MOUNTED


CONE COB LED / COB LED

A A A⁺




INSTALLATION MANUAL

1

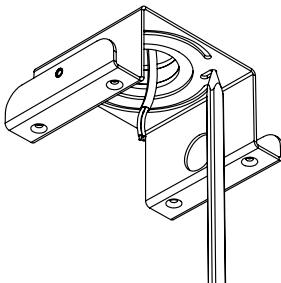


MARK DRILL HOLES ON THE CEILING USING THE INSTALLATION BRACKET

2

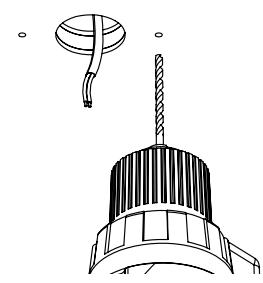


DRILL HOLES INTO THE CEILING USING THE MARKED SPOTS

3

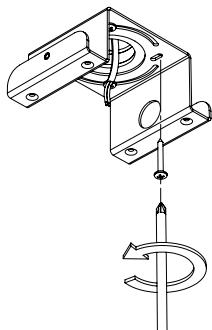

SCREW THE INSTALLATION BRACKET ONTO THE CEILING


4

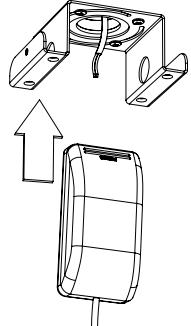

INSTALL THE DRIVER


5

⚠ POSITION THE DRIVER INBETWEEN THE BRACKET AND THE ARMATURE

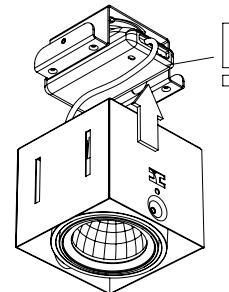


LIFT THE LIGHT ARMATURE ONTO THE BRACKET

6

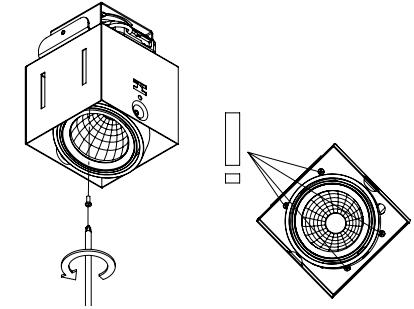


SCREW THE LIGHT ARMATURE ONTO THE THE BRACKET

7

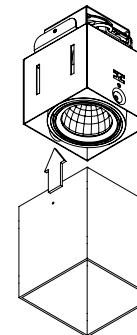

LIFT THE HOUSING OVER THE LIGHT ARMATURE AND BRACKET

8

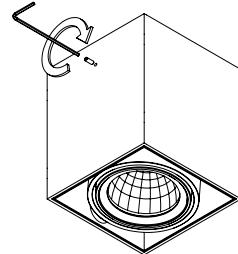

SCREW THE HOUSING ONTO THE BRACKET